 
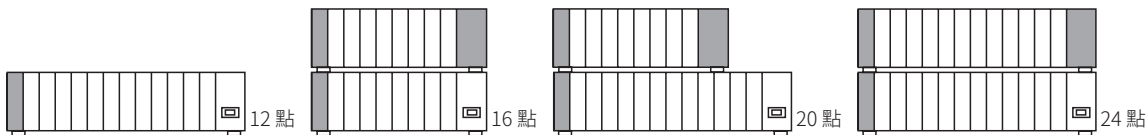 


**MAS 一卡單點外箱配置**

- 15 安培外箱，下面所示的配置可提供多種區域容量選擇，以適應幾乎所有控制應用
- 5、8、12 點外箱都為單條電源輸入



MAS 外箱	尺寸			
	MAD 外箱	高	深	寬
1 & 2 點		9-1/4"	10"	7"
3 點		9-1/4"	12-3/4"	7"
5 點		8-7/8"	11-1/2"	16-1/8"
6 點		8-7/8"	11-1/2"	18-1/8"
8 點		8-7/8"	11-1/2"	22-1/8"
12 點		8-7/8"	11-1/2"	30-1/4"

**Ps. 備註**

 
 
 
 
- 12插槽以上的外箱，其尺寸可用多個外箱相加
- MAS 適用於 AP-T1

**MAD 一卡雙點外箱配置**

- 15 安培外箱，每個點 15 安培，下方展示之配置提供多樣化選擇來節省空間容量，以適應幾乎所有控制應用場合
- 5、8、12 點插槽使用獨立的50安培主斷路器

**Ps. 備註**

- MAD 適用於 AP-D2

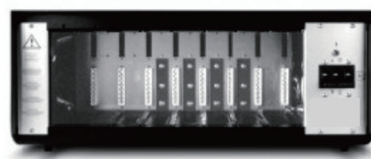

訂貨：  -  -  -  交期：  天

MAS

05

3

000

代號	說明
MAS	一卡單點
MAD	一卡雙點

MAS 一卡單點 插槽數 = 點數	MAD 一卡雙點 插槽數 = 點數
01 = 1	01 = 2
02 = 2	02 = 4
03 = 3	03 = 6
05 = 5	05 = 8~10
06 = 6	08 = 12~16
08 = 8	12 = 16~24
12 = 12	16 = 16~32
16 = 16	24 = 26~48
20 = 20	
24 = 24	

"安裝面板數"  
需小於等於  
"插槽數"

特殊選項
000 = 其它需求
05A = 5 米電源線 (標準 3 M)
05B = 5 米補償導線 (標準 3 M)
050 = 警報輸出 (需有通訊)
070 = 警報輸出及蜂鳴器 (需有通訊)
未標示 = 3米電源線+3米補償導線